

Resetting USB drive using Windows Diskpart command

Simon Huang
Technical Product Manager

simon.huang@supertalent.com
Super Talent Technology

October, 2013

Release 1.00

Legal Disclaimer

- **INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH SUPER TALENT™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN SUPER TALENT'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, SUPER TALENT ASSUMES NO LIABILITY WHATSOEVER, AND SUPER TALENT DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF SUPER TALENT PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.**
- Super Talent may make changes to specifications and product descriptions at any time, without notice. Super Talent may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Super Talent reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. Contact your local Super Talent sales office or your distributor to obtain the latest specifications and before placing your product order. Copies of documents which have an order number and are referenced in this document, or other Super Talent literature may be obtained by visiting Super Talent's website at <http://www.supertalent.com>. Super Talent™ is a trademark or registered trademark of Super Talent or its subsidiaries in the United States and other countries.
- Other names and brands may be claimed as the property of others


Why uses Diskpart?

- Computer cannot recognize a USB drive
- USB drive partition has been corrupted
- Format command dose not work
- Resetting and wiping out all exist data to become a blank USB drive
- Make a bootable USB drive
- Simply reset and reformat a USB drive

Windows XP, 7 and 8 platforms

- Windows 7 – See page 5 to 9
- Windows 8 – See page 10 to 13
- Windows XP – See page 14

Windows 7

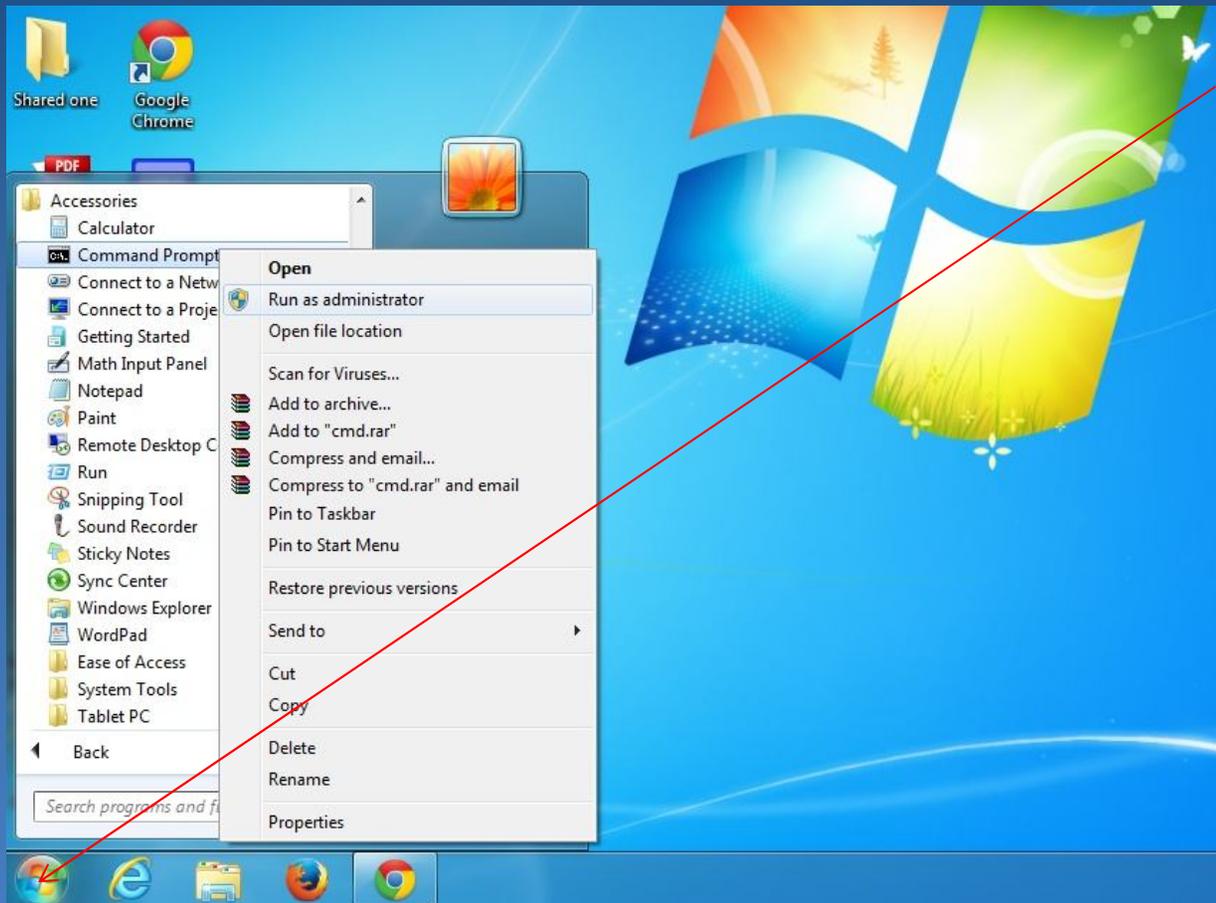

1. Click on Windows ICON
2. Select Command Prompt & Click on **Run as Administrator**

Windows 7

```
Administrator: Command Prompt - diskpart
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>diskpart

Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: SIMON-PC

DISKPART> list disk

   Disk ###  Status         Size           Free           Dyn  Gpt
   -----  -
   Disk 0    Online         931 GB         16 MB
   Disk 1    Online         1924 MB         0 B

DISKPART> select disk 1
Disk 1 is now the selected disk.
DISKPART> _
```

- 1) Type diskpart
- 2) Type list disk
- 3) select disk n ; Where n is USB drive

Windows 7

```
Administrator: Command Prompt - diskpart
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>diskpart

Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: SIMON-PC

DISKPART> list disk

   Disk ###  Status         Size           Free           Dyn  Gpt
   -----  -
   Disk 0    Online         931 GB          16 MB
   Disk 1    Online        1924 MB        1923 MB

DISKPART> select disk 1

Disk 1 is now the selected disk.

DISKPART> clean

DiskPart succeeded in cleaning the disk.

DISKPART> create partition primary

DiskPart succeeded in creating the specified partition.

DISKPART> format fs=fat32 quick

   100 percent completed

DiskPart successfully formatted the volume.

DISKPART>
```

1. Type clean
2. Type create partition primary
3. Type format fs= fat32 quick
or format fs=ntfs quick

Windows 7

```
Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>diskpart

Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: SIMON-PC

DISKPART> list disk

   Disk ###  Status         Size           Free           Dyn  Gpt
   -----  -
   Disk 0    Online         931 GB          16 MB
   Disk 1    Online        1924 MB        1923 MB

DISKPART> select disk 1

Disk 1 is now the selected disk.

DISKPART> clean

DiskPart succeeded in cleaning the disk.

DISKPART> create partition primary

DiskPart succeeded in creating the specified partition.

DISKPART> format fs=fat32 quick

   100 percent completed

DiskPart successfully formatted the volume.

DISKPART> active

DiskPart marked the current partition as active.

DISKPART> assign

DiskPart successfully assigned the drive letter or mount point.


DISKPART> exit

Leaving DiskPart...

C:\Windows\system32>exit_
```


1. Type active
2. Type assign
3. Type exit
4. Type exit

Windows 7

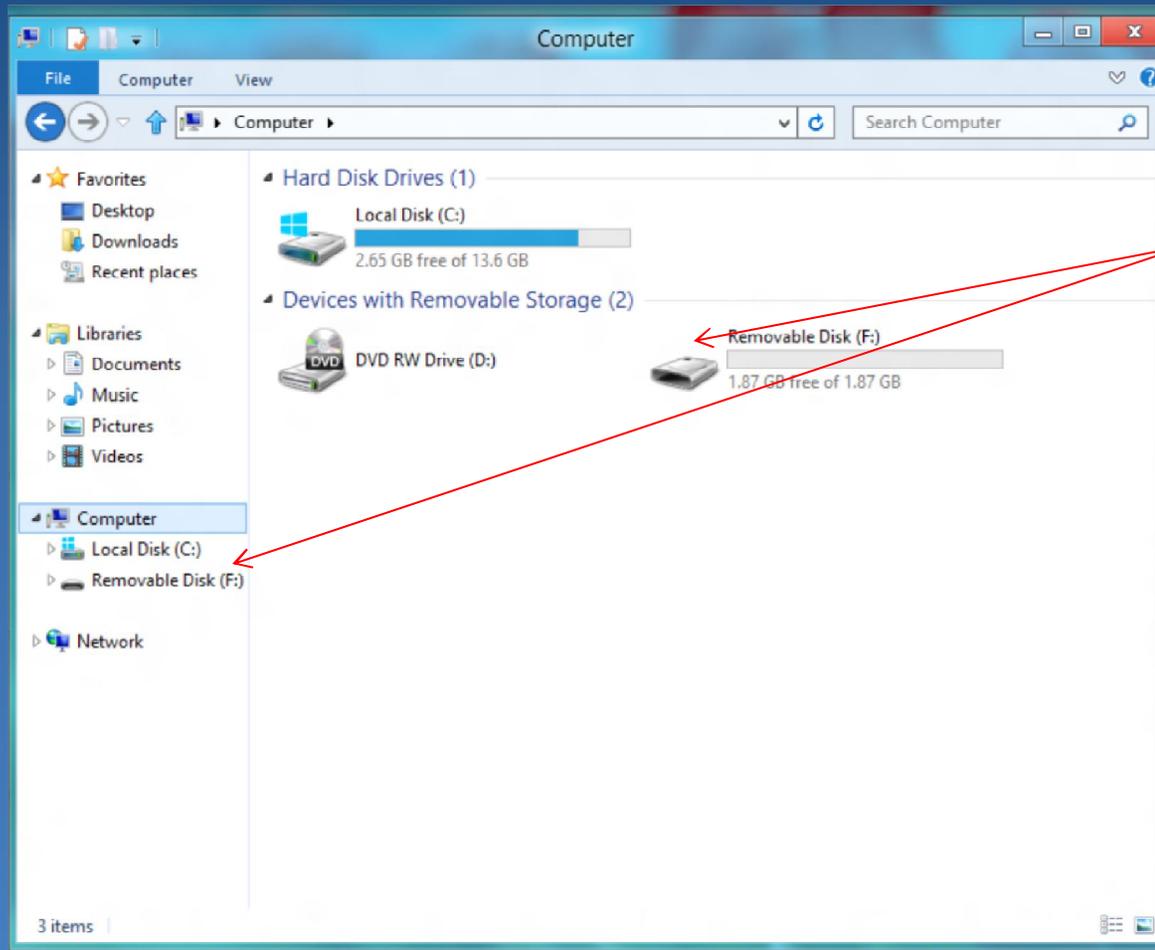

* USB drive has been reset and ready to use

Windows 8

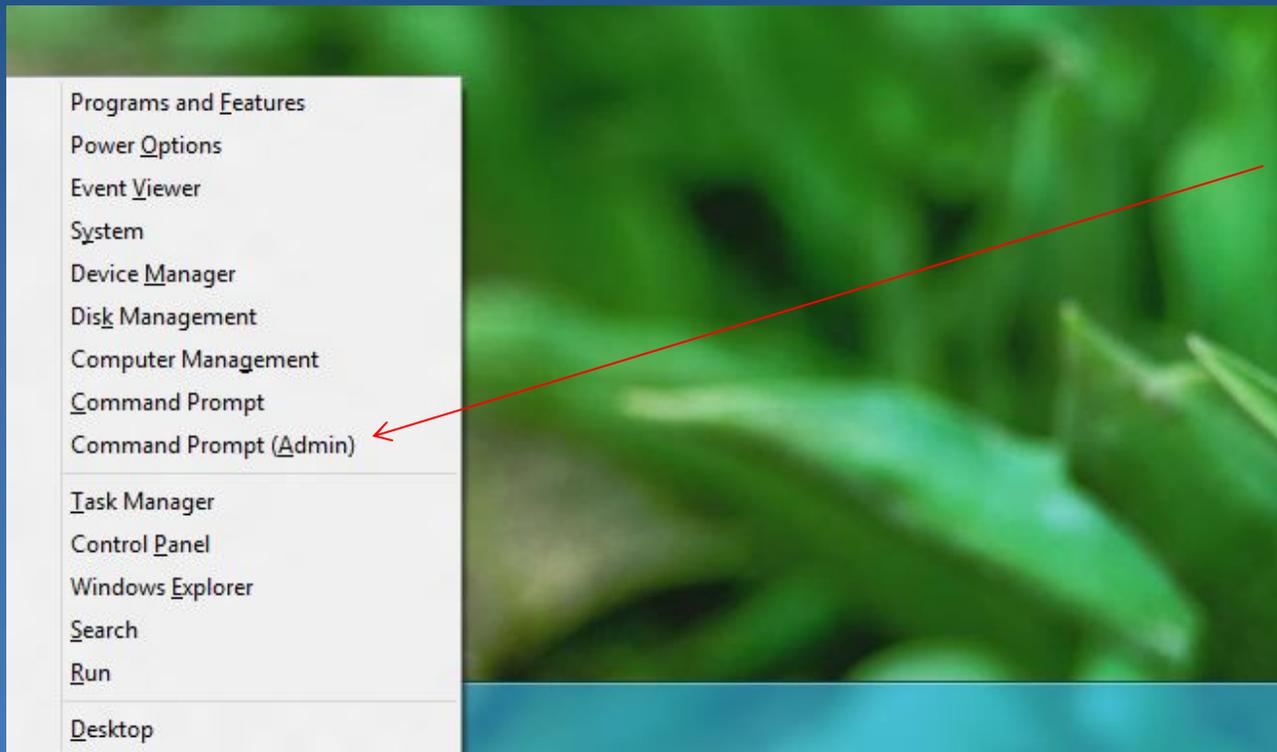

1. Press Windows Key + X key (Same time) 
2. Click on **Command Prompt (Admin)**

Windows 8



```
C:\> Administrator: Command Prompt - diskpart
Microsoft Windows [Version 6.2.8400]
(c) 2012 Microsoft Corporation. All rights reserved.

C:\windows\system32>diskpart

Microsoft DiskPart version 6.2.8400

Copyright (C) 1999-2012 Microsoft Corporation.
On computer: SIMON

DISKPART> list disk

   Disk ###  Status         Size           Free           Dyn  Gpt
   -----  -
   Disk 0    Online         13 GB          0 B
   Disk 1    Online         1924 MB        0 B

DISKPART> select disk 1
Disk 1 is now the selected disk.

DISKPART> clean

DiskPart succeeded in cleaning the disk.
```

- 1) Type diskpart
- 2) Type list disk
- 3) select disk n ; Where n is USB drive

Windows 8

```
Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>diskpart

Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: SIMON-PC

DISKPART> list disk

   Disk ###  Status         Size           Free           Dyn  Gpt
   -----  -
   Disk 0    Online         931 GB          16 MB
   Disk 1    Online        1924 MB        1923 MB

DISKPART> select disk 1

Disk 1 is now the selected disk.

DISKPART> clean

DiskPart succeeded in cleaning the disk.

DISKPART> create partition primary

DiskPart succeeded in creating the specified partition.

DISKPART> format fs=fat32 quick

   100 percent completed

DiskPart successfully formatted the volume.

DISKPART> active

DiskPart marked the current partition as active.

DISKPART> assign

DiskPart successfully assigned the drive letter or mount point.


DISKPART> exit

Leaving DiskPart...

C:\Windows\system32>exit_
```

1. Type clean
2. Type create partition primary
3. Type format fs= fat32 quick or format fs=ntfs quick
4. Type active
5. Type assign
6. Type exit
7. Type exit

Windows 8

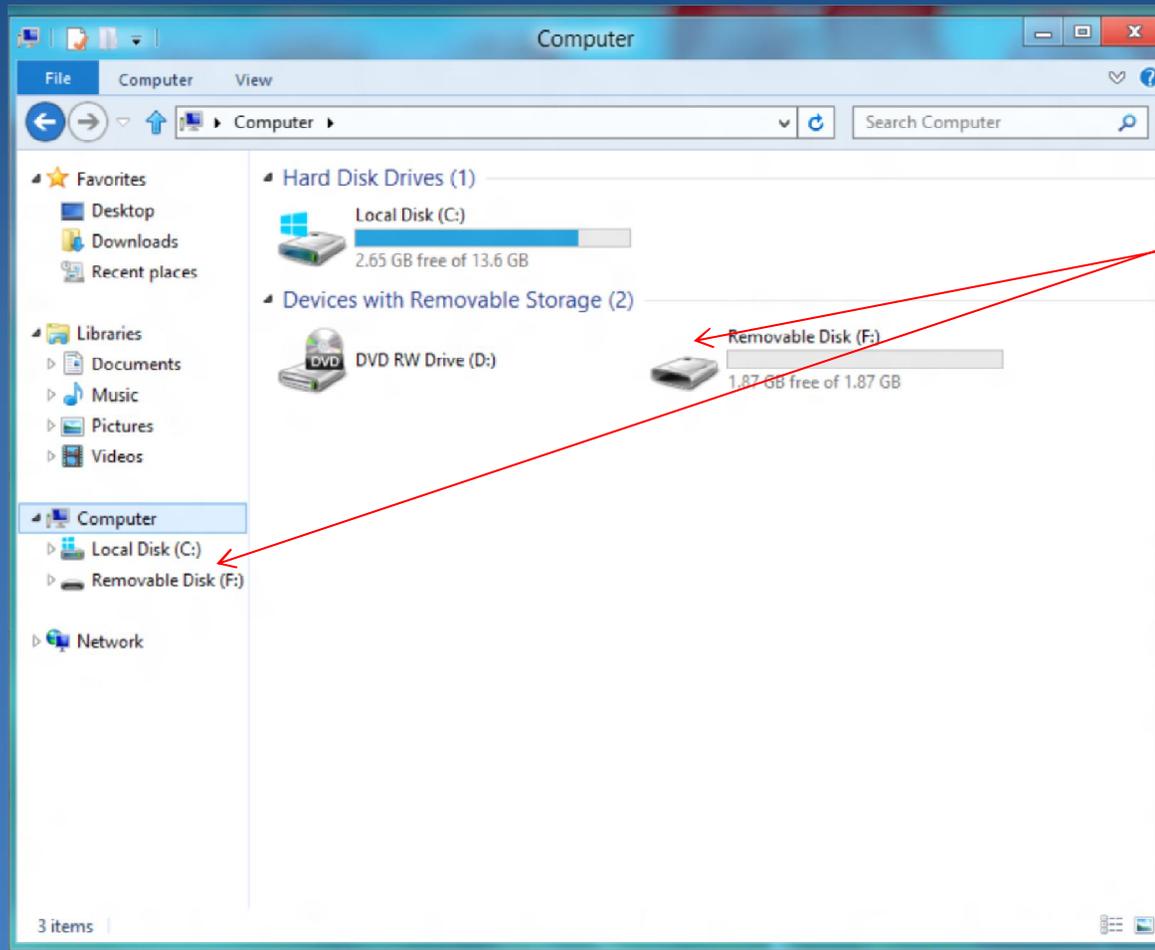

* USB drive has been reset and ready to use

Windows XP

- Similar Windows 7 procedures
- Refer to page 5 to page 9

References

- <http://www.supertalent.com/support/faq.php>
- <http://www.supertalent.com/datasheets/How%20to%20format%20USB%20drive%20with%20NTFS.pdf>
- <http://www.supertalent.com/support/technical.php>

For more info:

Visit:

<http://www.supertalent.com> or

Email:

support@supertalent.com or

sales@supertalent.com