

Address all questions to:
Support@SuperTalent.com

Steps to Upgrading, or re-installing, Mega Screen MP3 Player Firmware - recommended for PC systems running Windows XP, but these actions should work with PC systems running Windows 2000 too. Copy your stored files to a local hard drive.

These procedures, as described below, will require the user to download and install the Utility Tool file (**M508 update Tool 1.1.4.exe**) and the USB Driver file (**NX58xx_USB_Driver3.1_WinXP.exe**) to the PC system first.

Please Note: There are two firmware versions, one for Mega Screen MP3 Players shipped with a light grey retail box and one for Mega Screen MP3 Players shipped with a dark grey retail box.

Download these file names from the SuperTalent.com web site to upgrade, or re-install, the Mega Screen MP3 Player Firmware:

Utility Tool File and USB Driver File:

- M508 update Tool 1.1.4.exe
- NX58xx_USB_Driver3.1_WinXP.exe

Light Grey Retail Box:

- M508_Nx58_Orion_060516_RTC_M_super.bin
- NX58_G5_RamDown.hex
- NX58_G5_RamDown.ram

Dark Grey Retail Box:

- M508_Nx58_UG_060516_RTC_M_super.bin
- NX58_G5_RamDown.hex
- NX58_G5_RamDown.ram

Follow the instructions starting from the next page.


- I. After the Utility Tool is downloaded to the PC system, open the file and follow the **NxLoader 1.1.4 Setup Wizard** to install the Utility Tool.

- a. NxLoader 1.1.4 setup guide




Recommended Destination Folder: C:\Program Files\NxLoader_ML

- b. Complete installation by clicking the "Finish" button

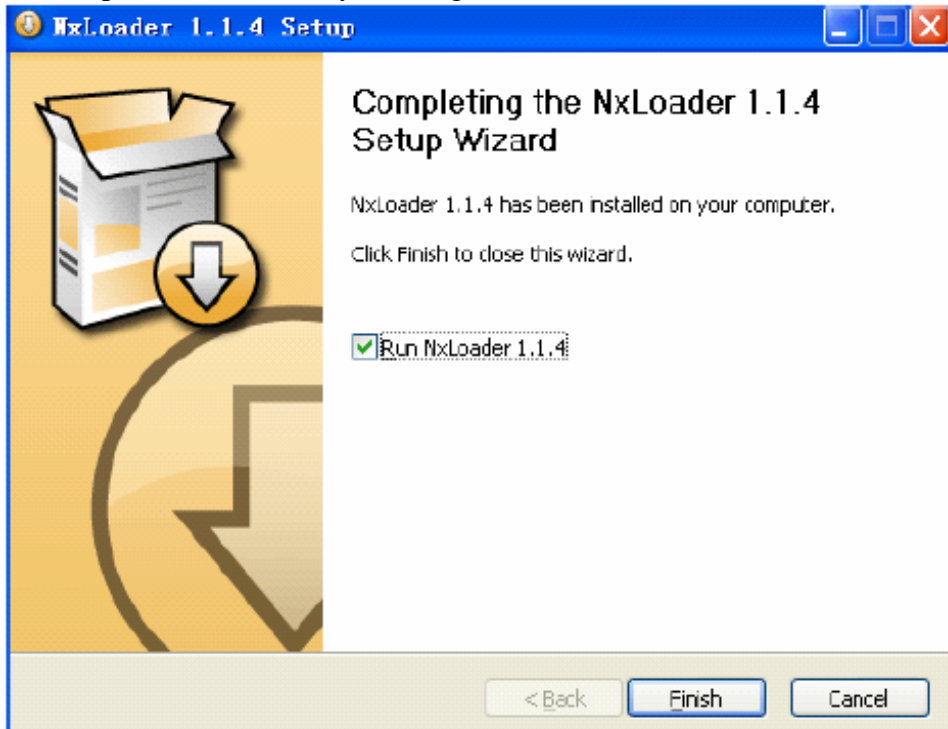


a. If successful, click the “Finish” button




III. Once the Driver file has been installed, look for this icon  **NxLoader_ML** from desktop screen. Now download the updated Firmware file (depends on your retail box color) to the PC system, then use mouse to double-click on the Driver file icon.




a. This window should appear, if not already present, after you double-click on the NxLoader_ML icon

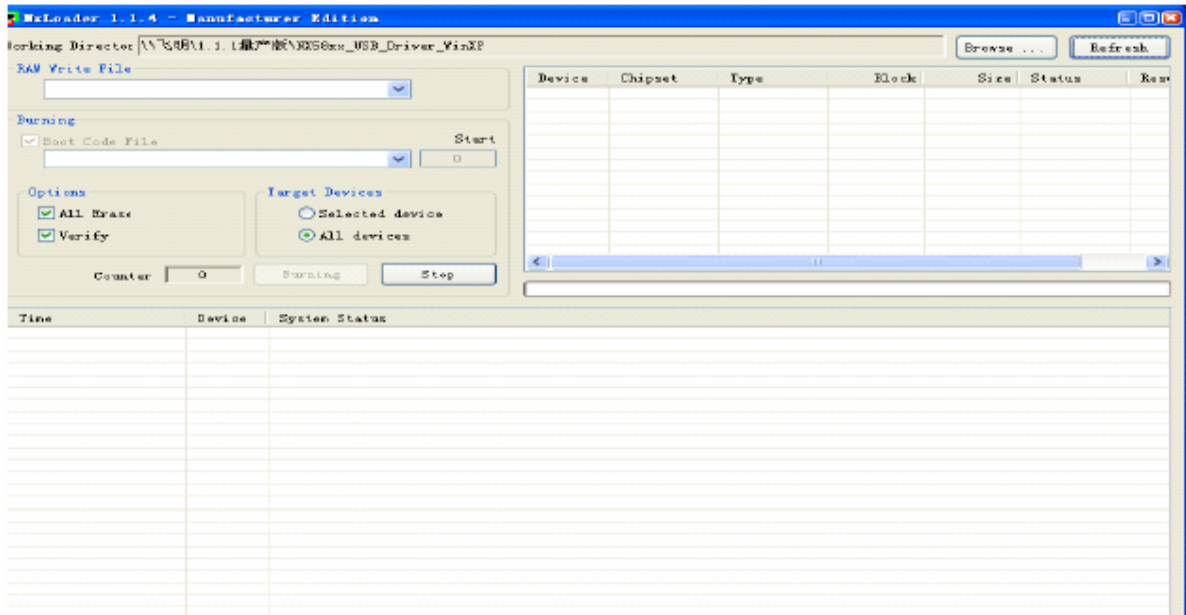


b. Select “Browse” to search for where you saved the updated Firmware file (depends on your retail box color).

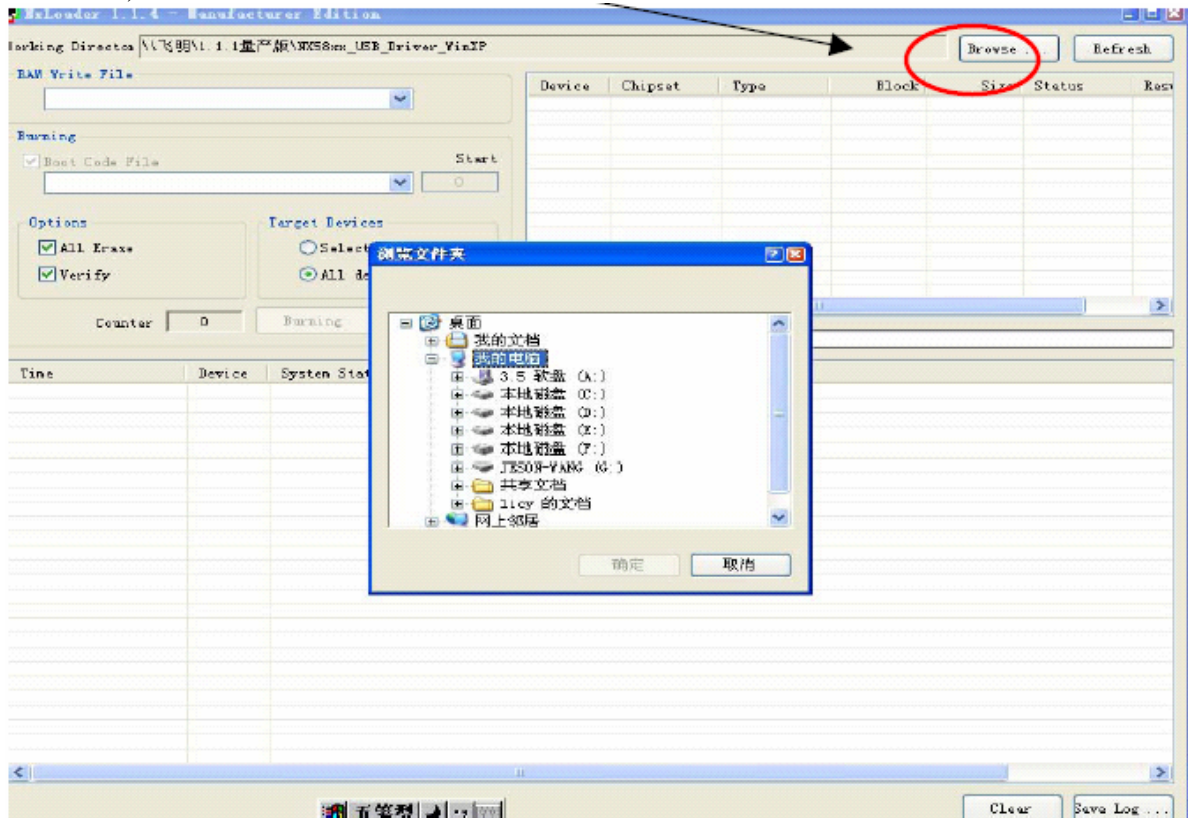


c. If successful, the files **NX58_G5_RamDown.hex** for RAM Write File menu and **M116_Nx58_060510_H_panda.bin** for Boot Code File menu will automatically appear.

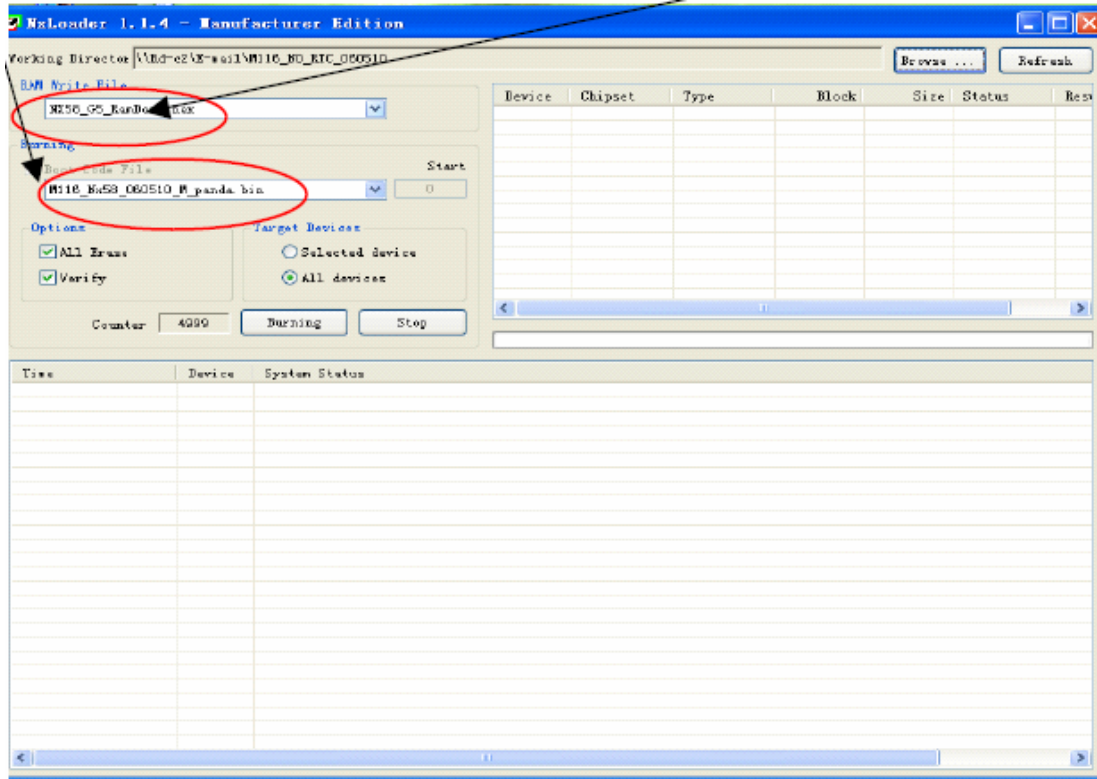


d. With the MP3 Player turned off, hold the “NEXT ►►” key down first and then connect your MP3 Player to your PC system using the USB cable provided. You should see the system information (below) automatically appear within the NxLoader window.

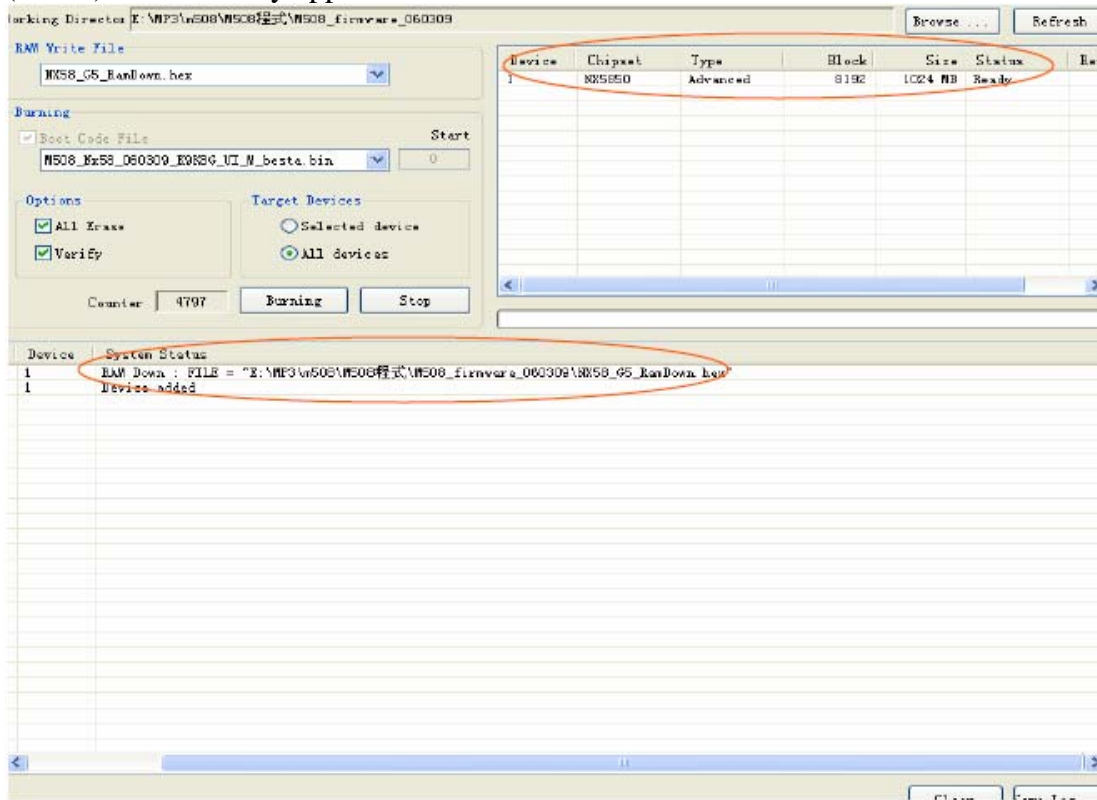


e. Now you can stop holding the MP3 Player’s “Next ►►” key. Now select the “Burning” button as indicated below.

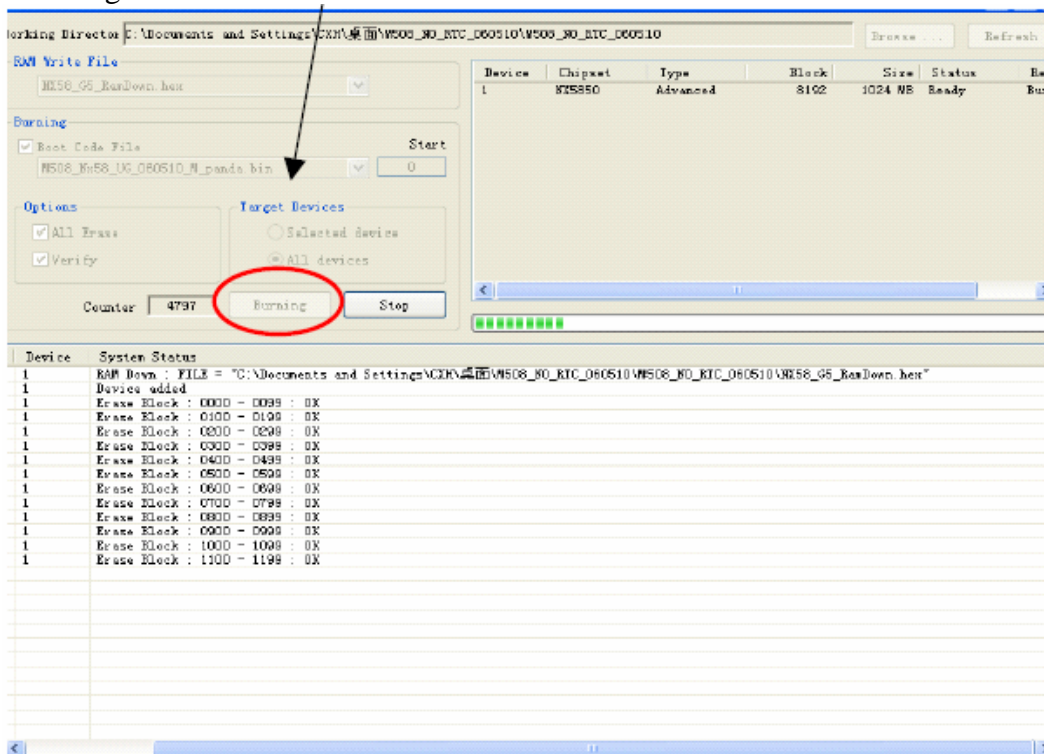

f. If successful, you should see “OK” within the NxLoader window.

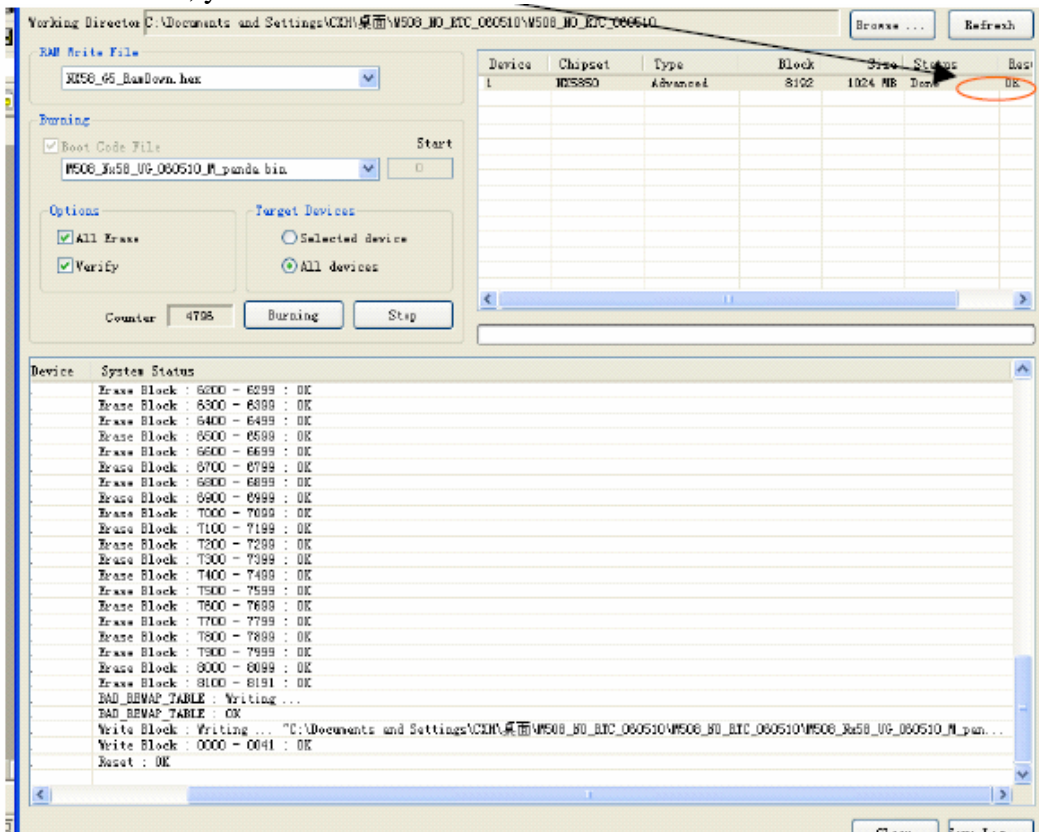

IV. Disconnect, and re-connect the MP3 Player from the PC system. You should see the words, “Low Format” on the MP3 Player’s screen. You might receive the message, “Disk not formatted, want to format?” If you do not see this message, click on the “My Computer” icon from your Windows desktop screen. Locate “Removable Disk” device and right-click to select “Format...” Choose FAT32 format. Do not check the “Quick Format” box.

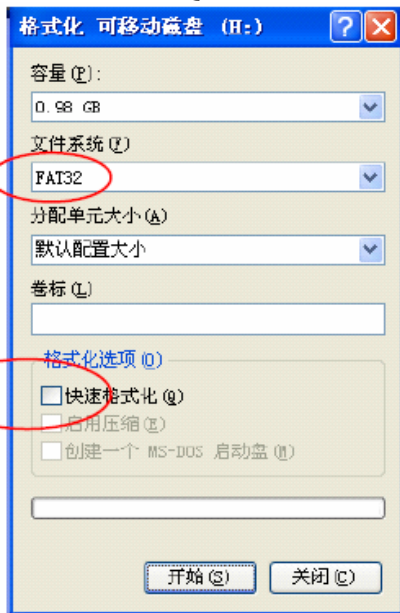

Now you should be able to utilize your MP3 Player as before.